




 pempek
made for mining

Drill Rig TSRU
Dismount / Mount
and Chain Tension
Instructions.

1. Apply sling lift and apply tension

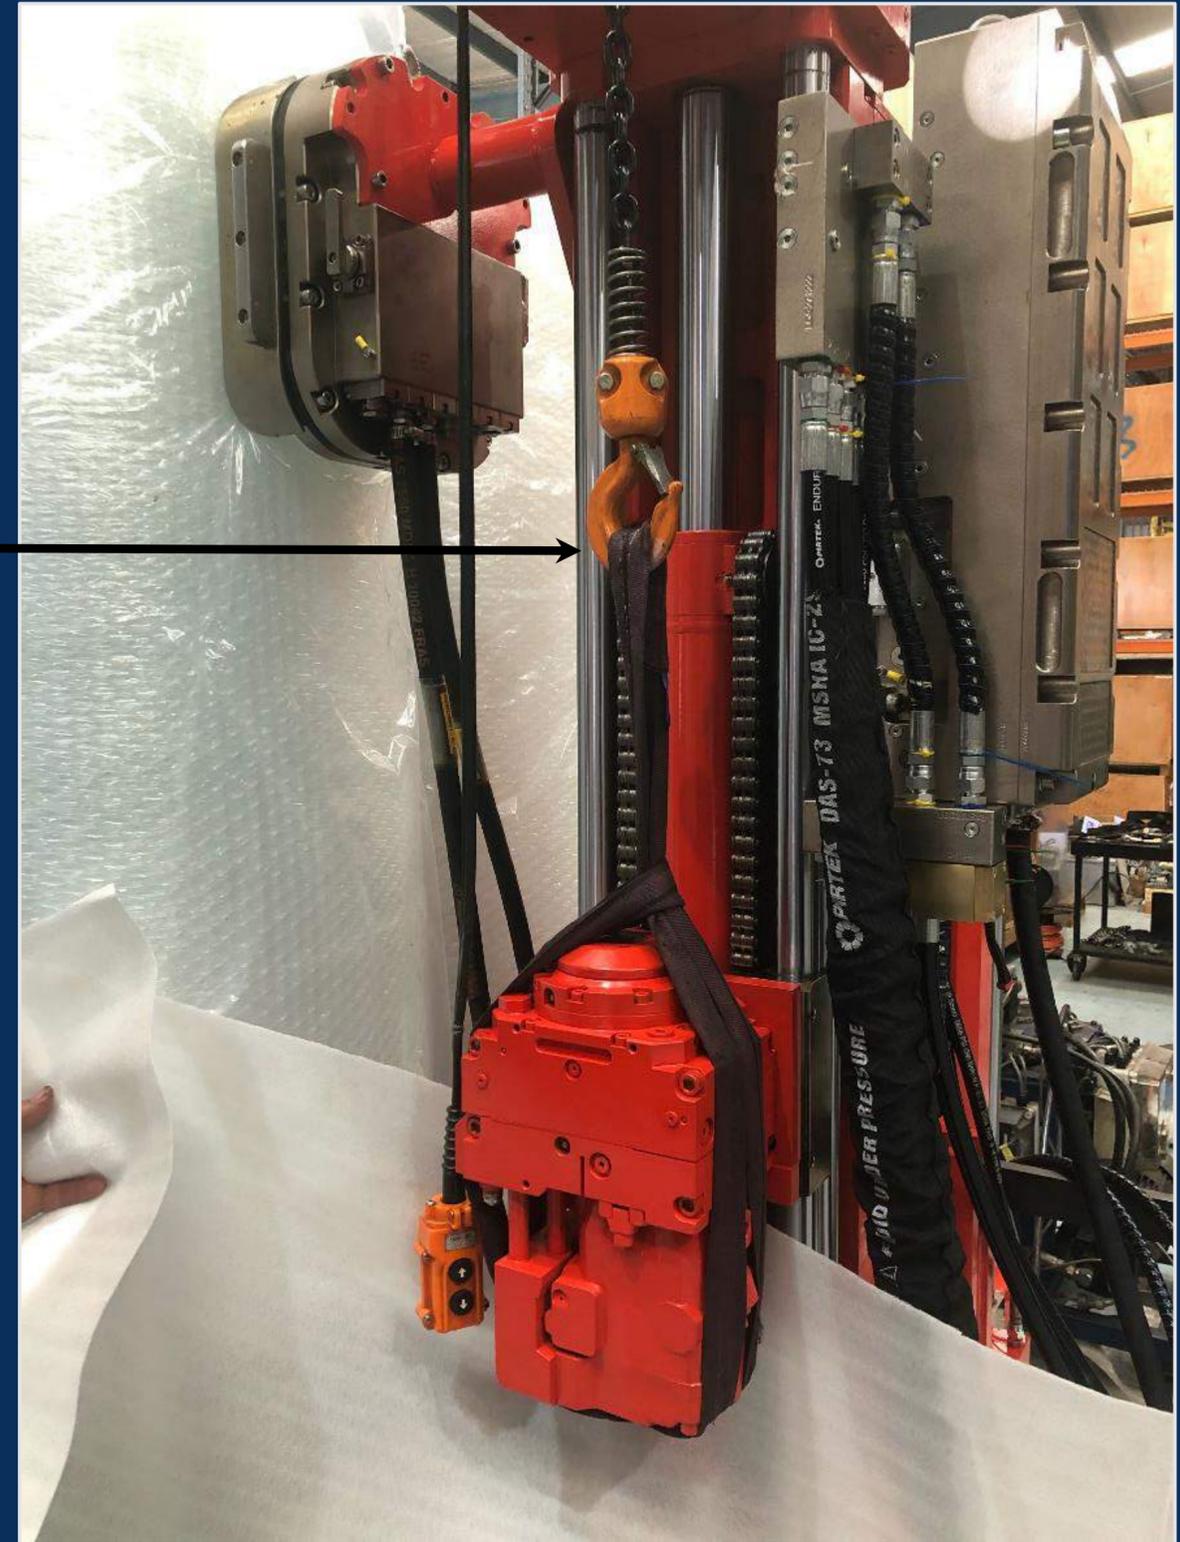


2. Loosen 2 x top cap screws and two lower cap screws



3. Balance lift sling and remove four cap screws


Dismount TSRU

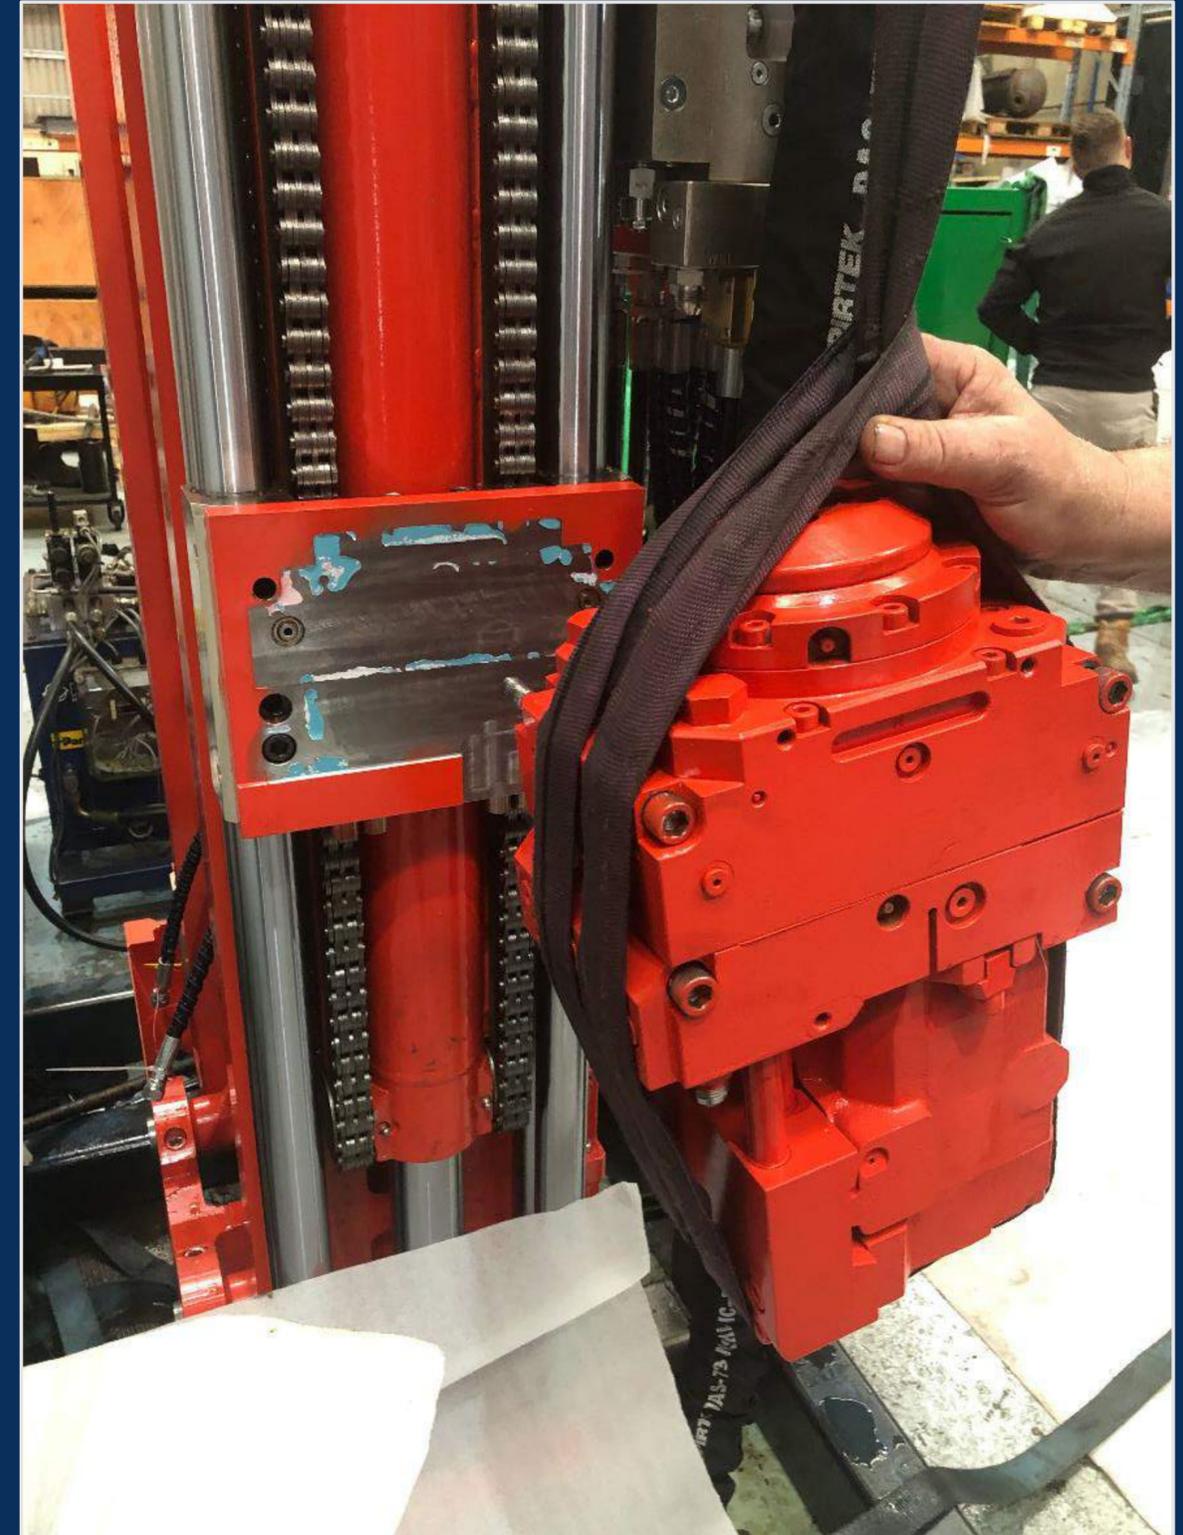


4. Remove 2 cap screws from motor plate.

NOTE!


RHS Motor Plate screw positions
Are Different to LHS

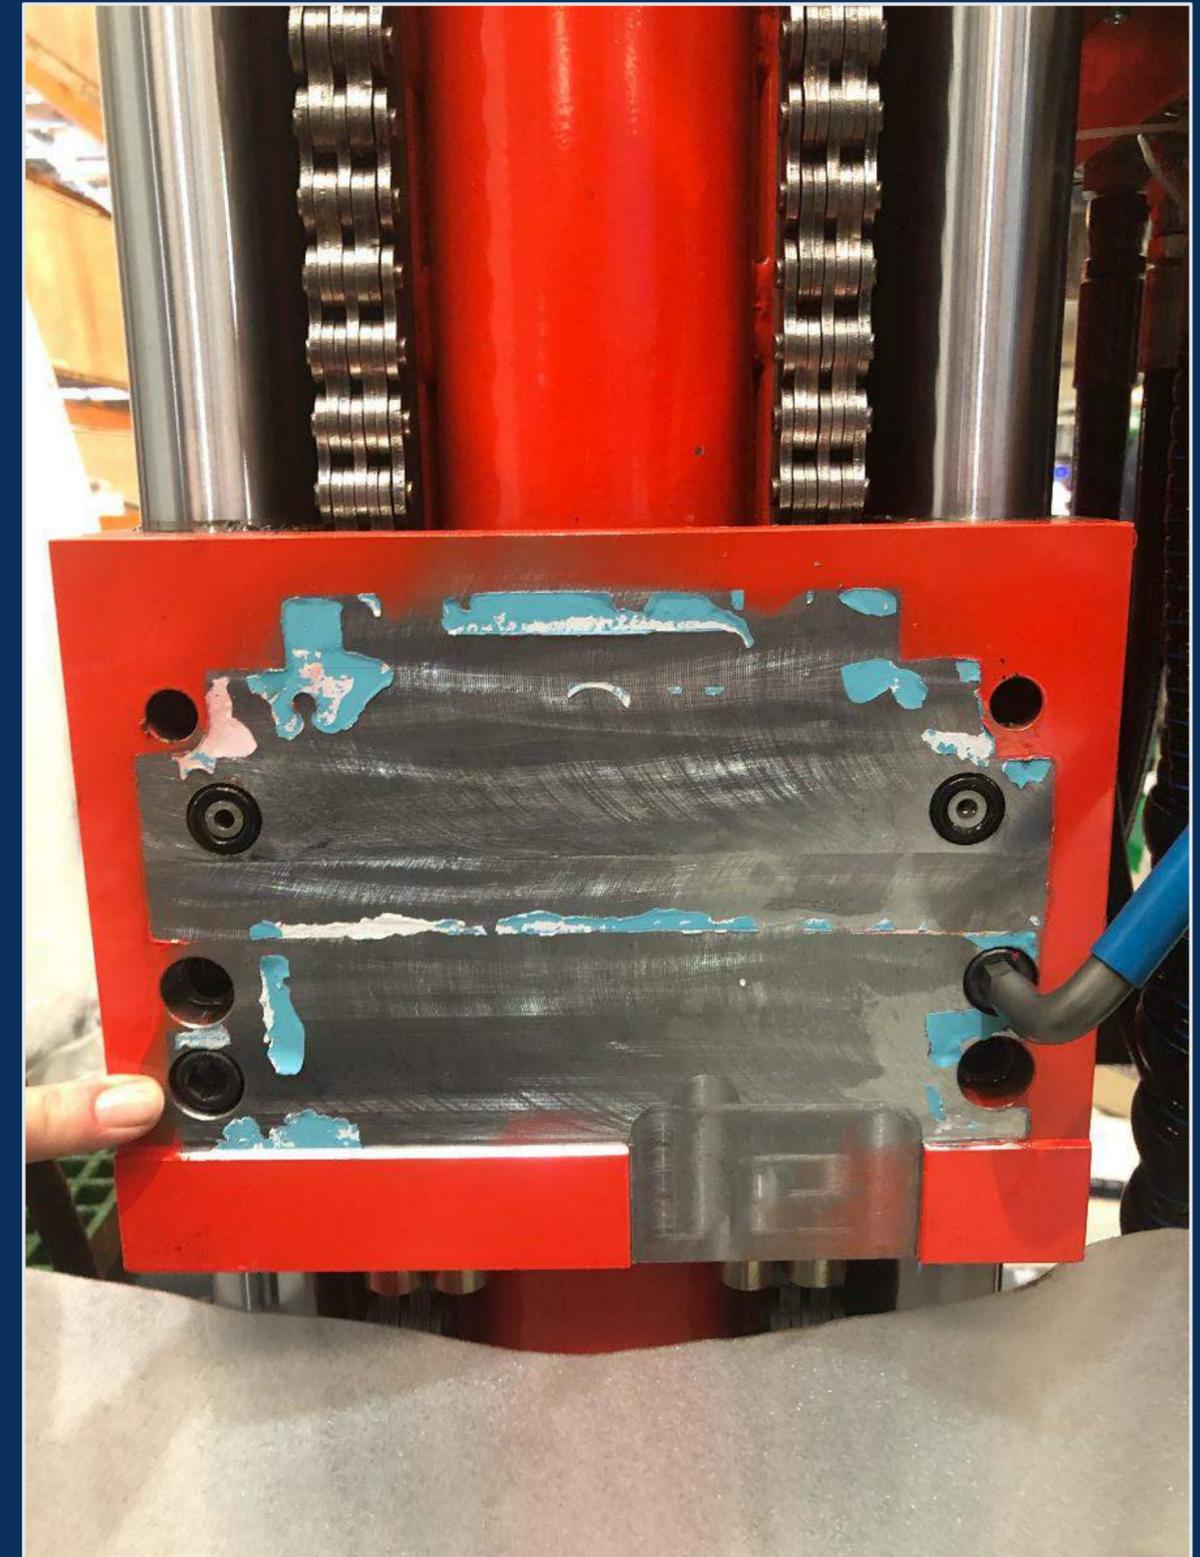

5. Remove 2 x screw keepers

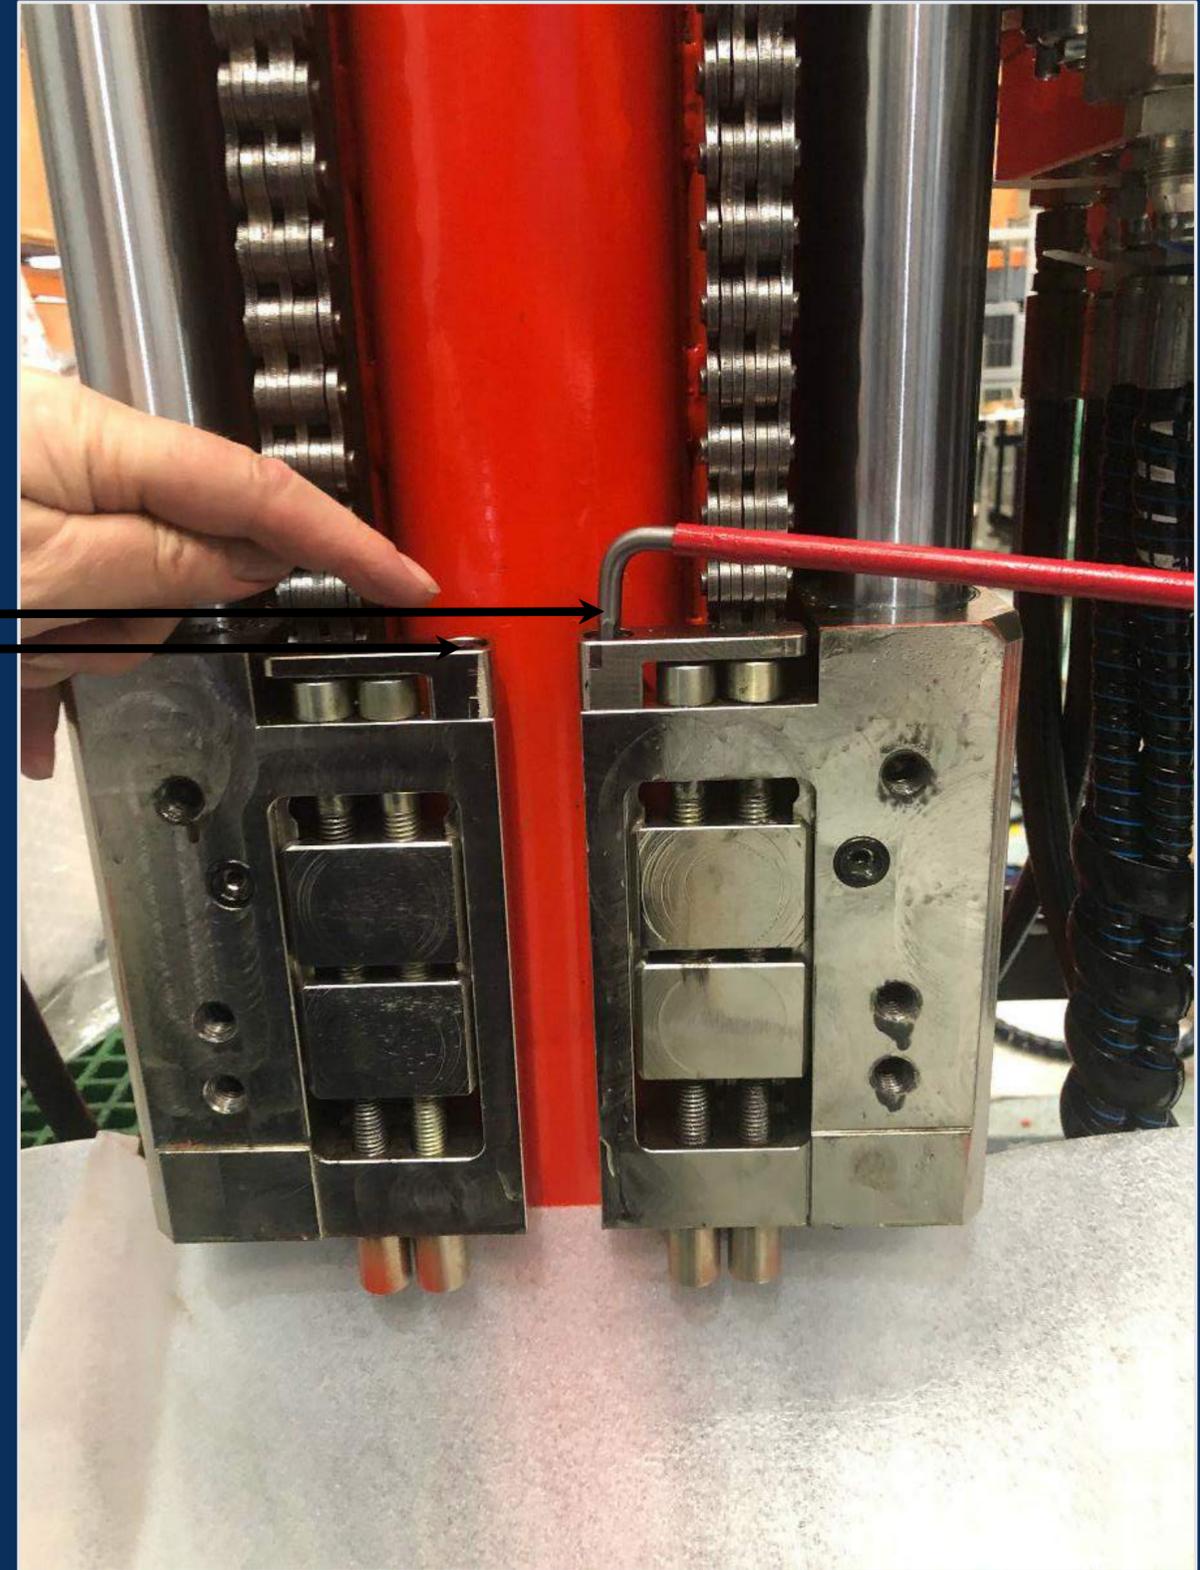


6. Adjust top and bottom tensioner screws X 2

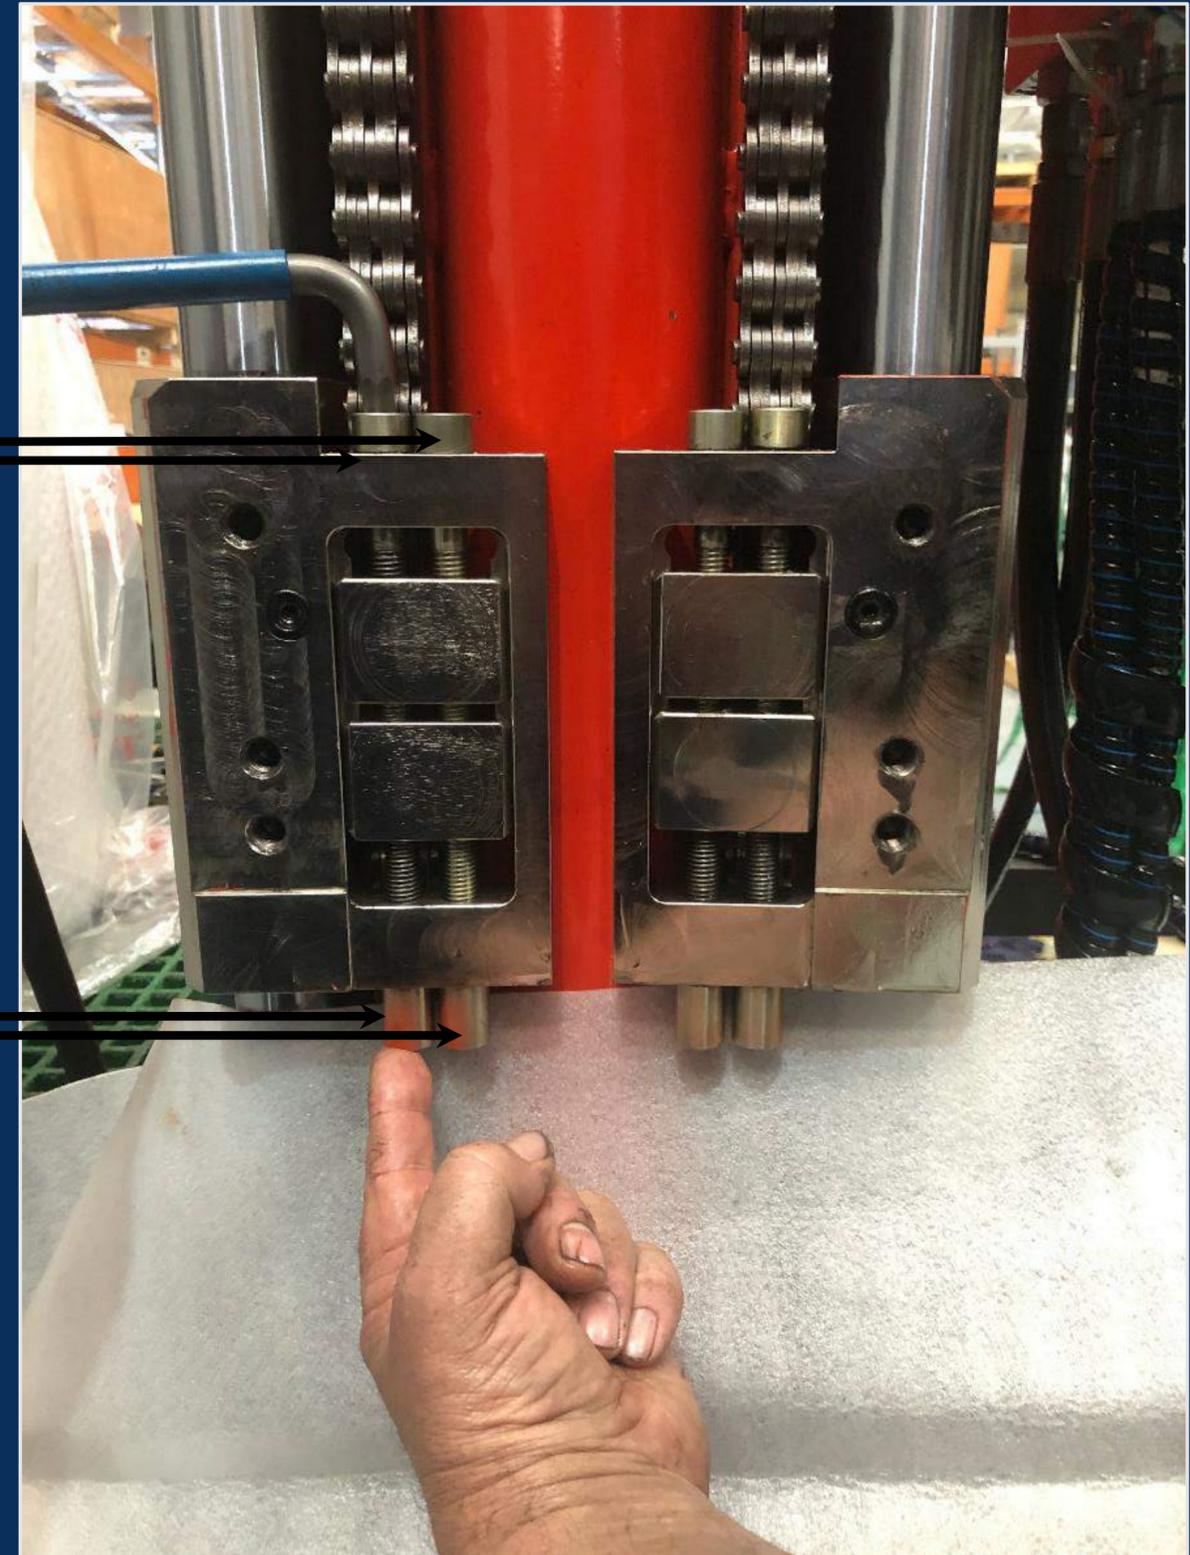

RHS Adjust Chain Tension



7. Adjust top and bottom tensioner screws X 2

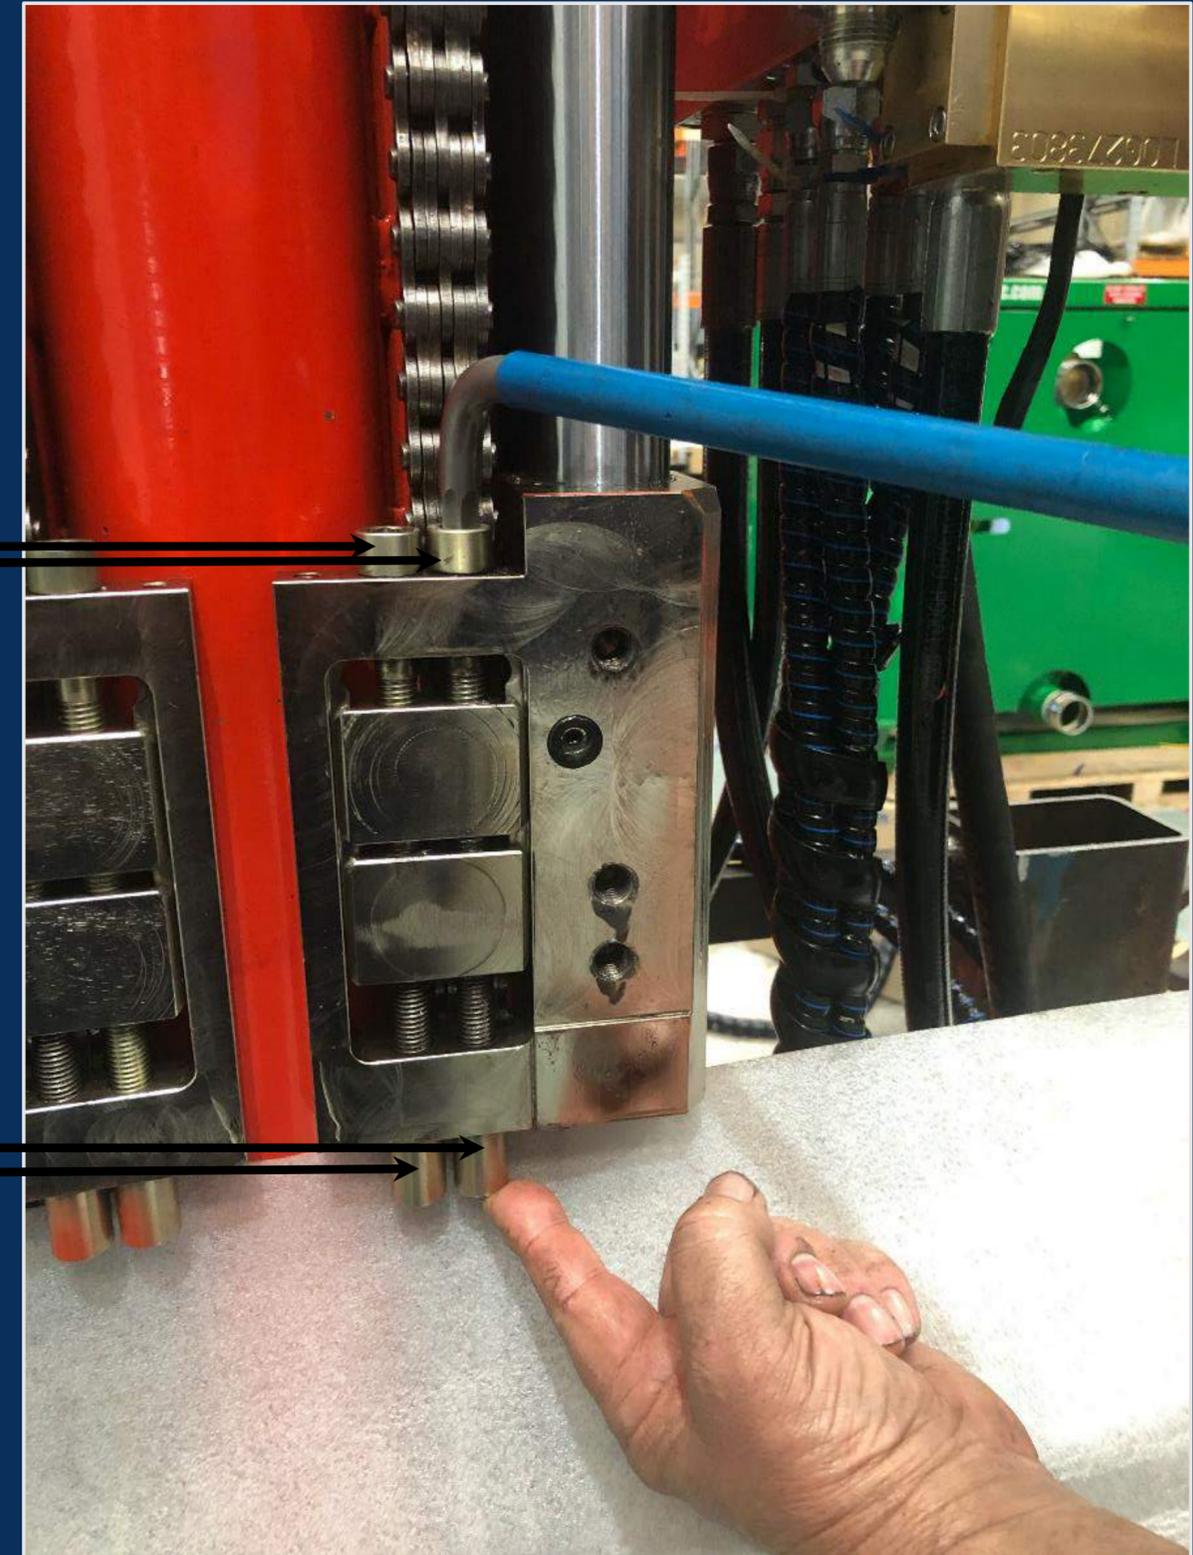

8. Check O rings installed,
reinstall keeper plates
check O rings




9. Check O rings installed, reinstall mount plate + check O rings

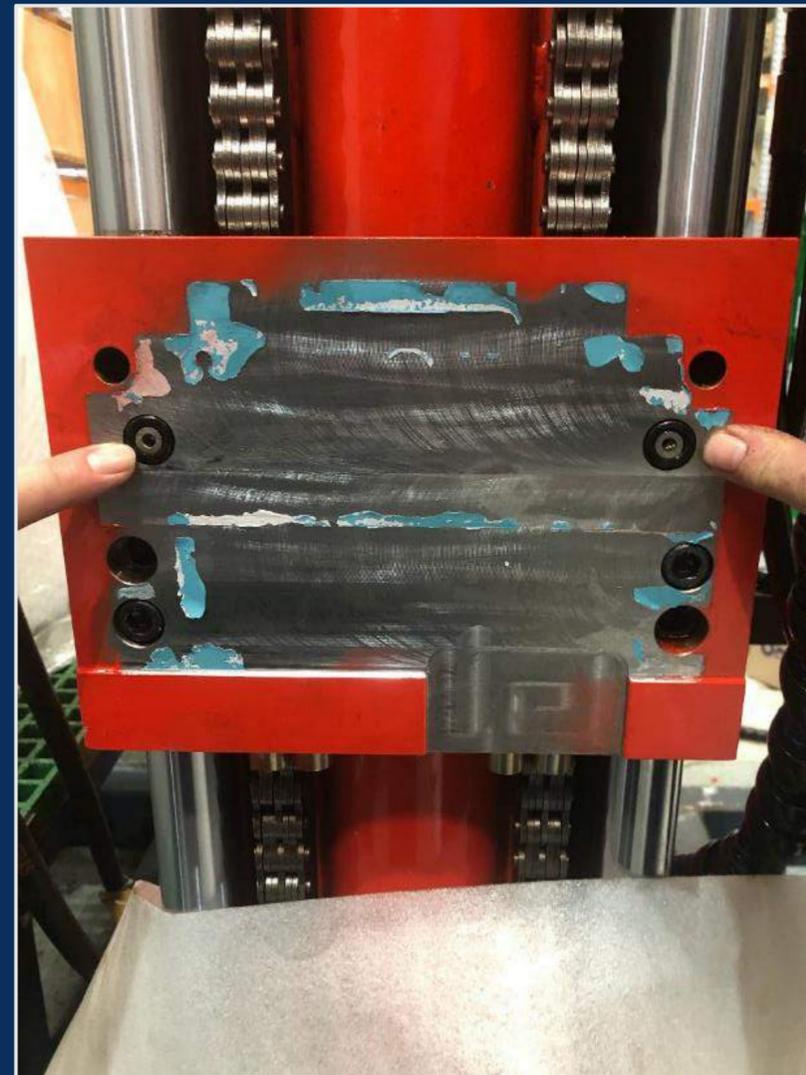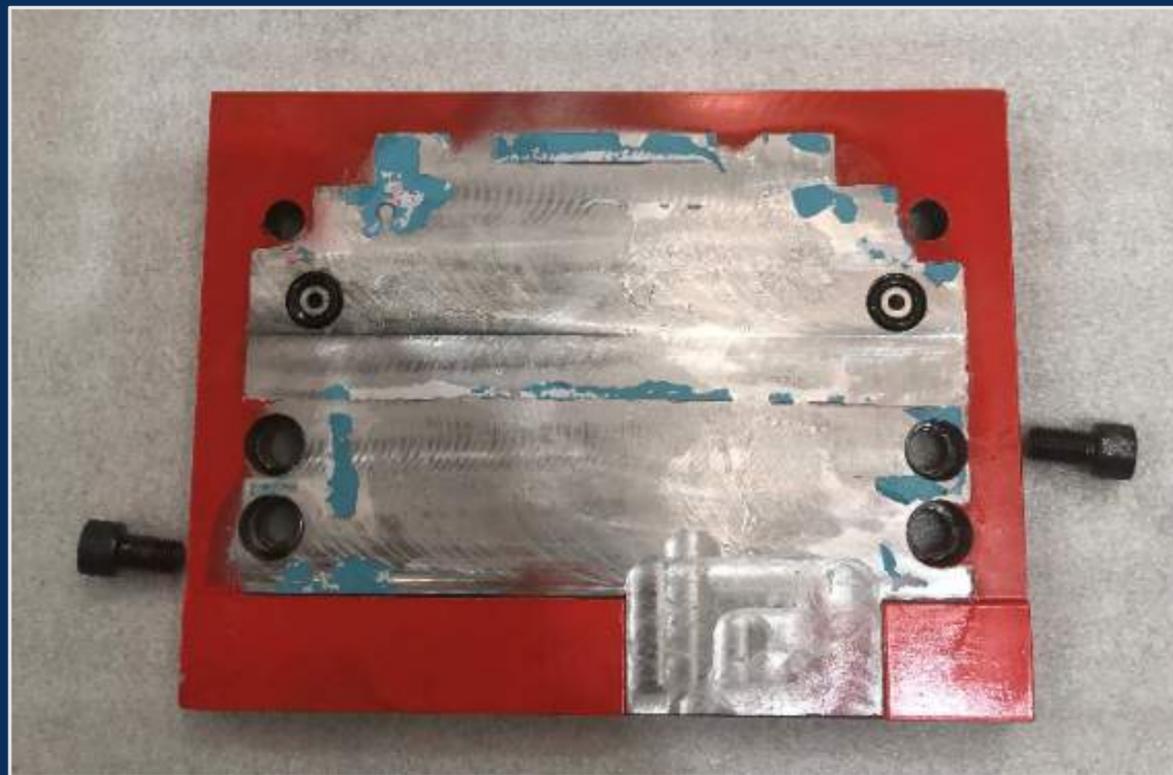

10. Remount TSRU
Tighten 4
x Cap screws



11. Apply sling lift
And apply tension

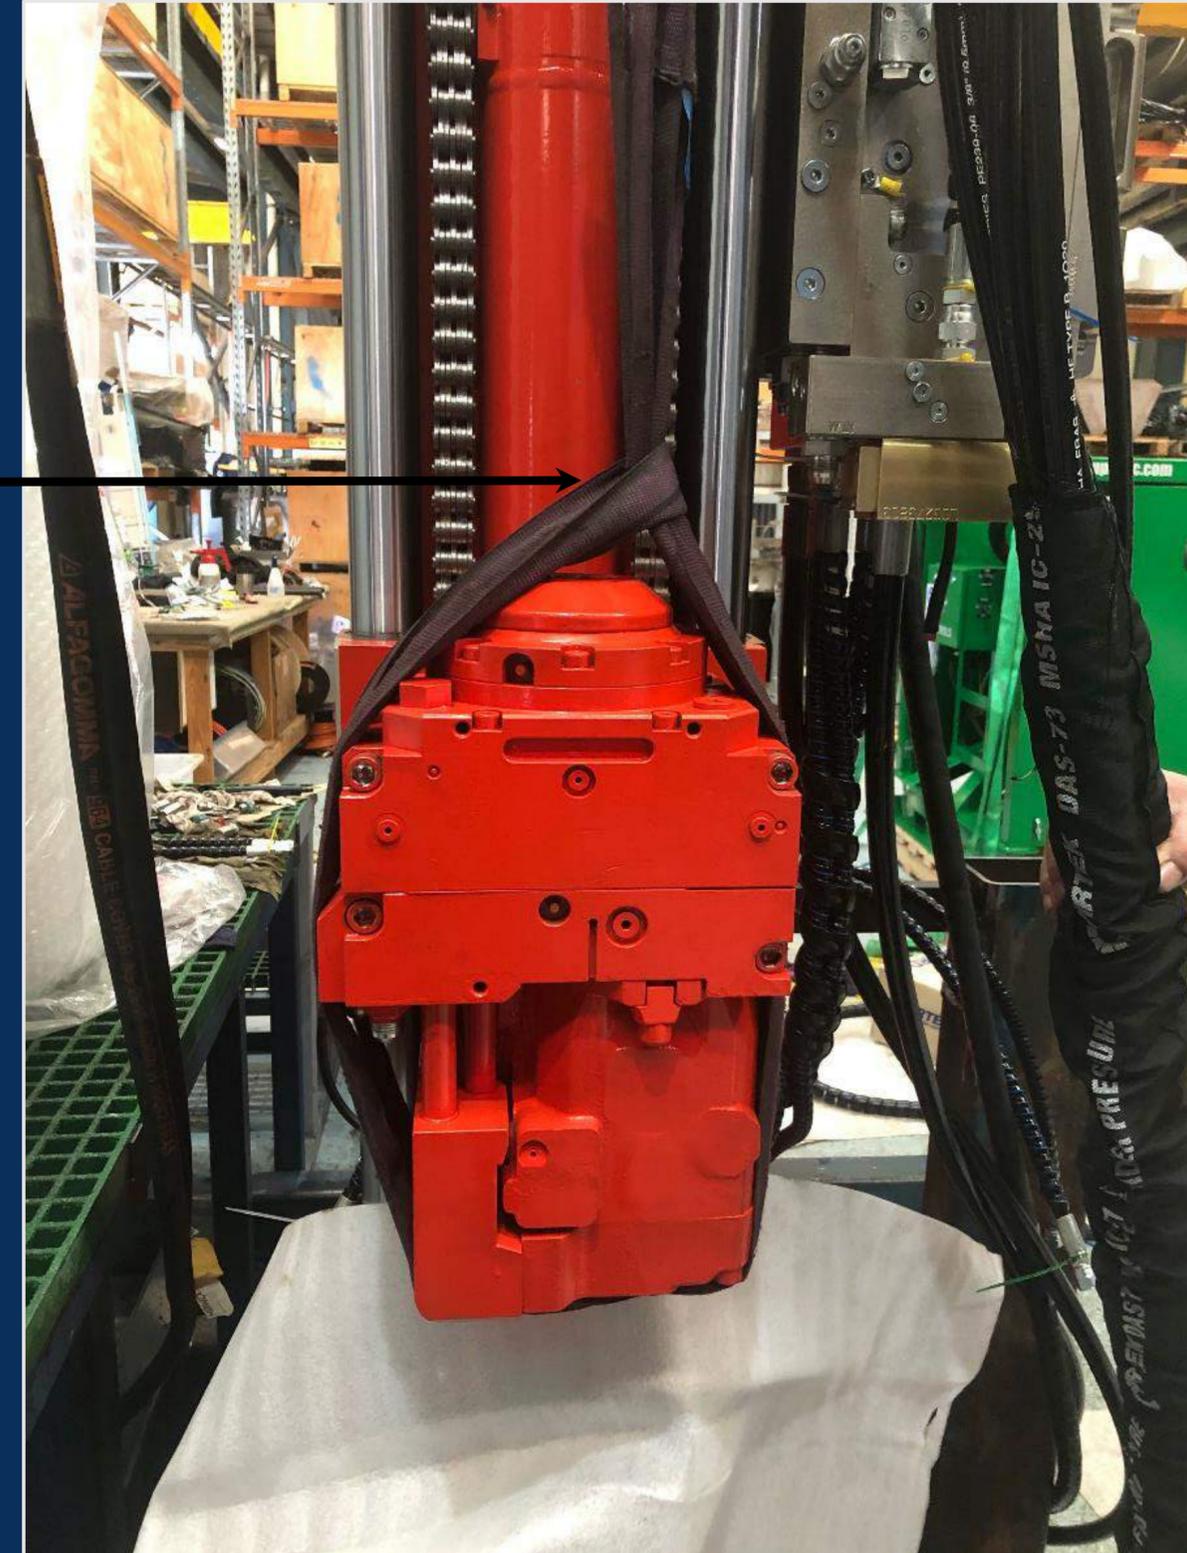

12. Remove 4 x Motor cap screws


Demount TSRU

NOTE!


LHS Motor Plate screw positions
Are Different to RHS.

NOTE!

O rings

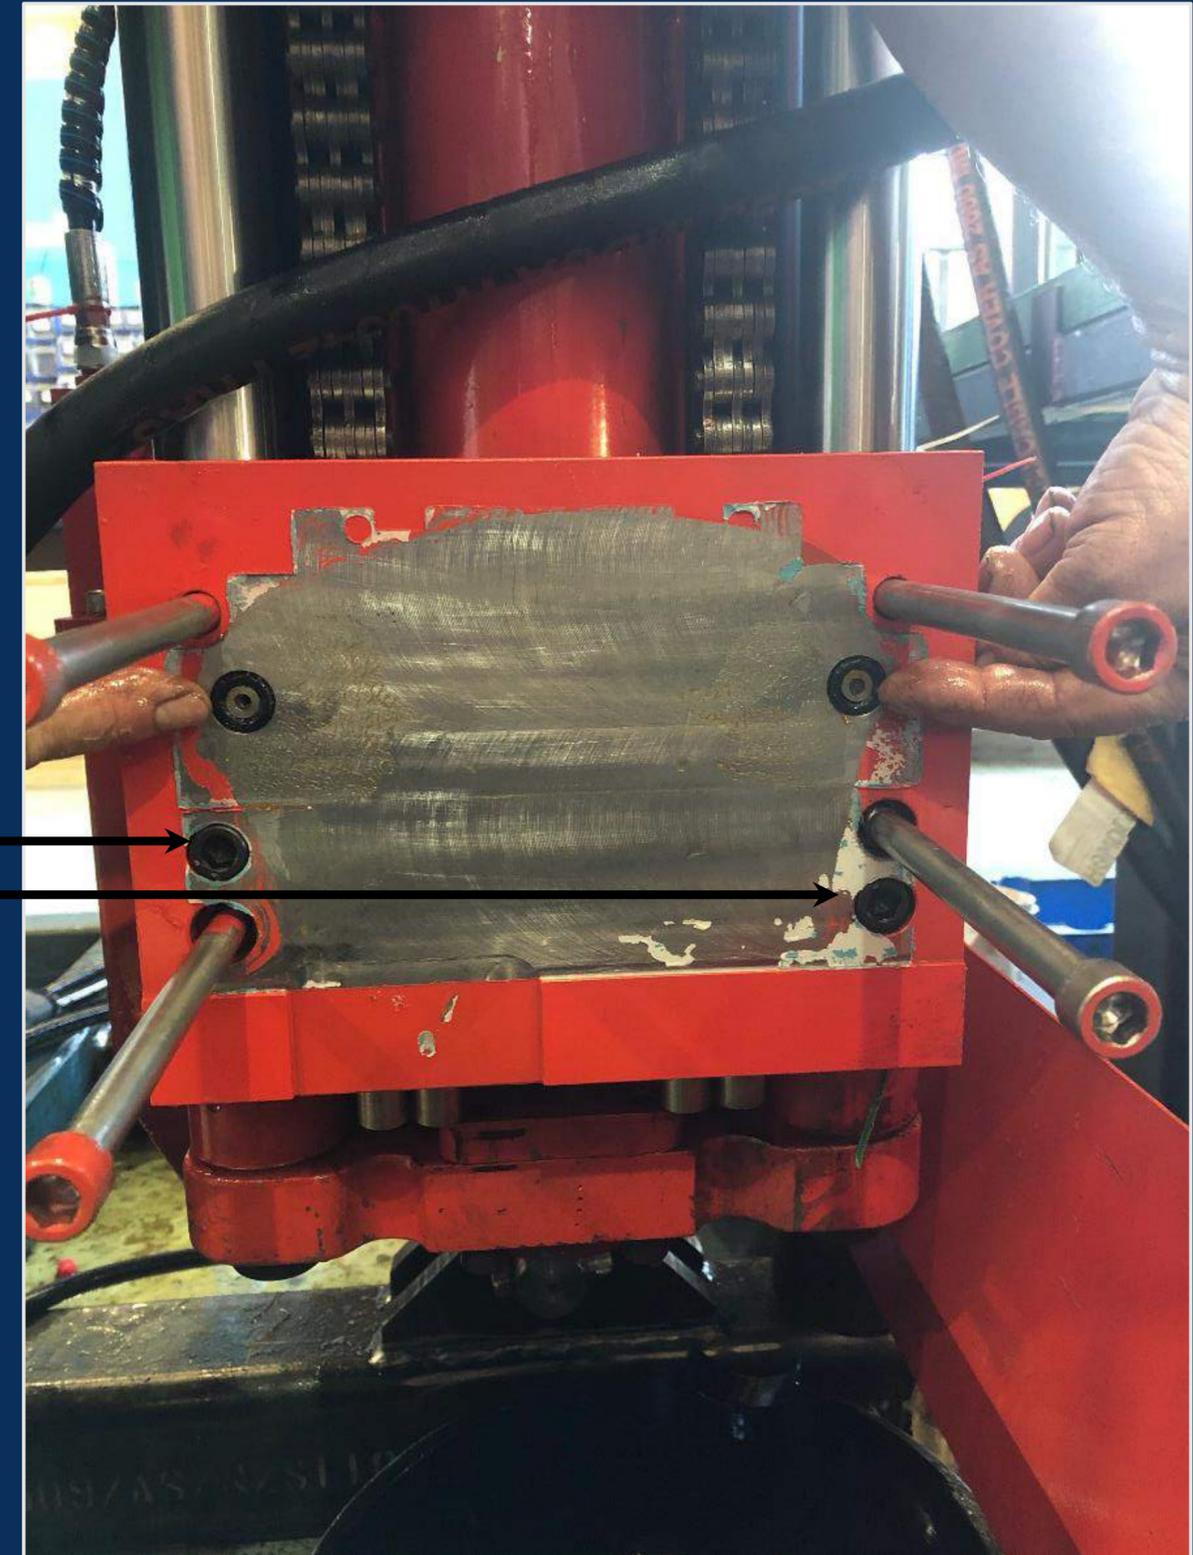


13. Adjust top and bottom tensioner screws X 2

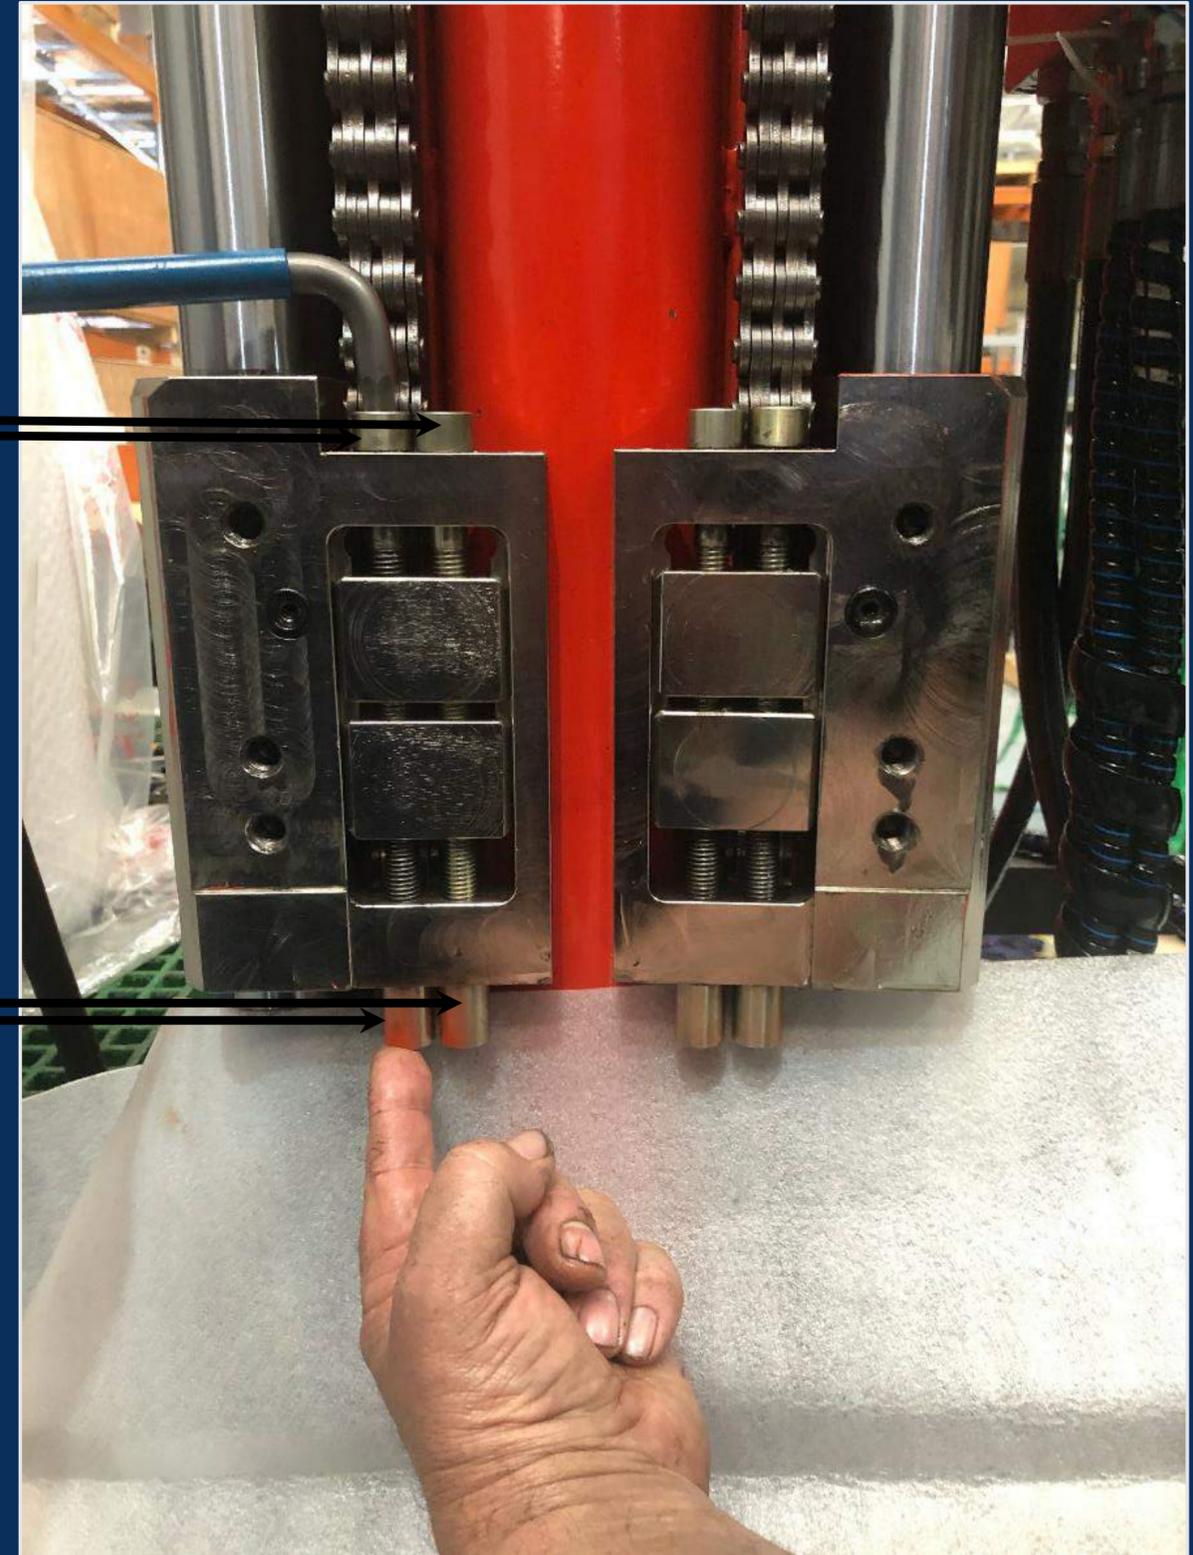


LHS Adjust Chain Tension

14. Adjust top and bottom tensioner screws X 2

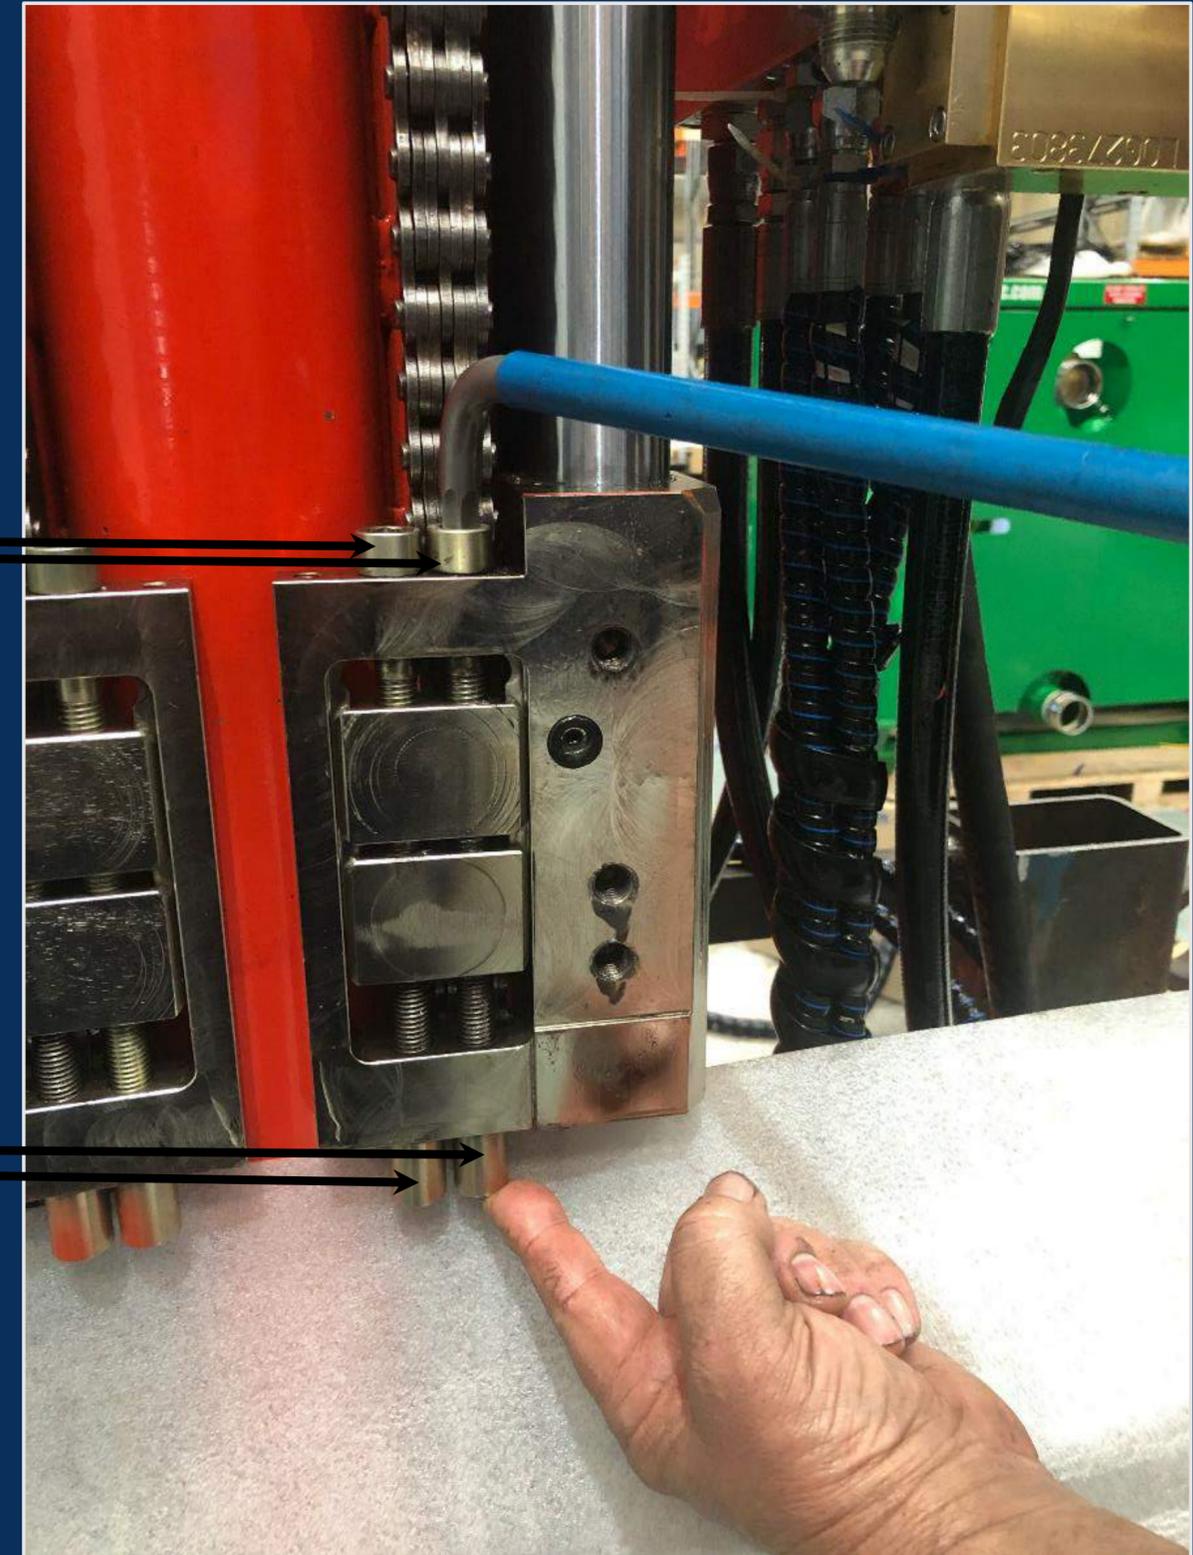


15. Check O rings installed,
reinstall keeper plates

Check O rings

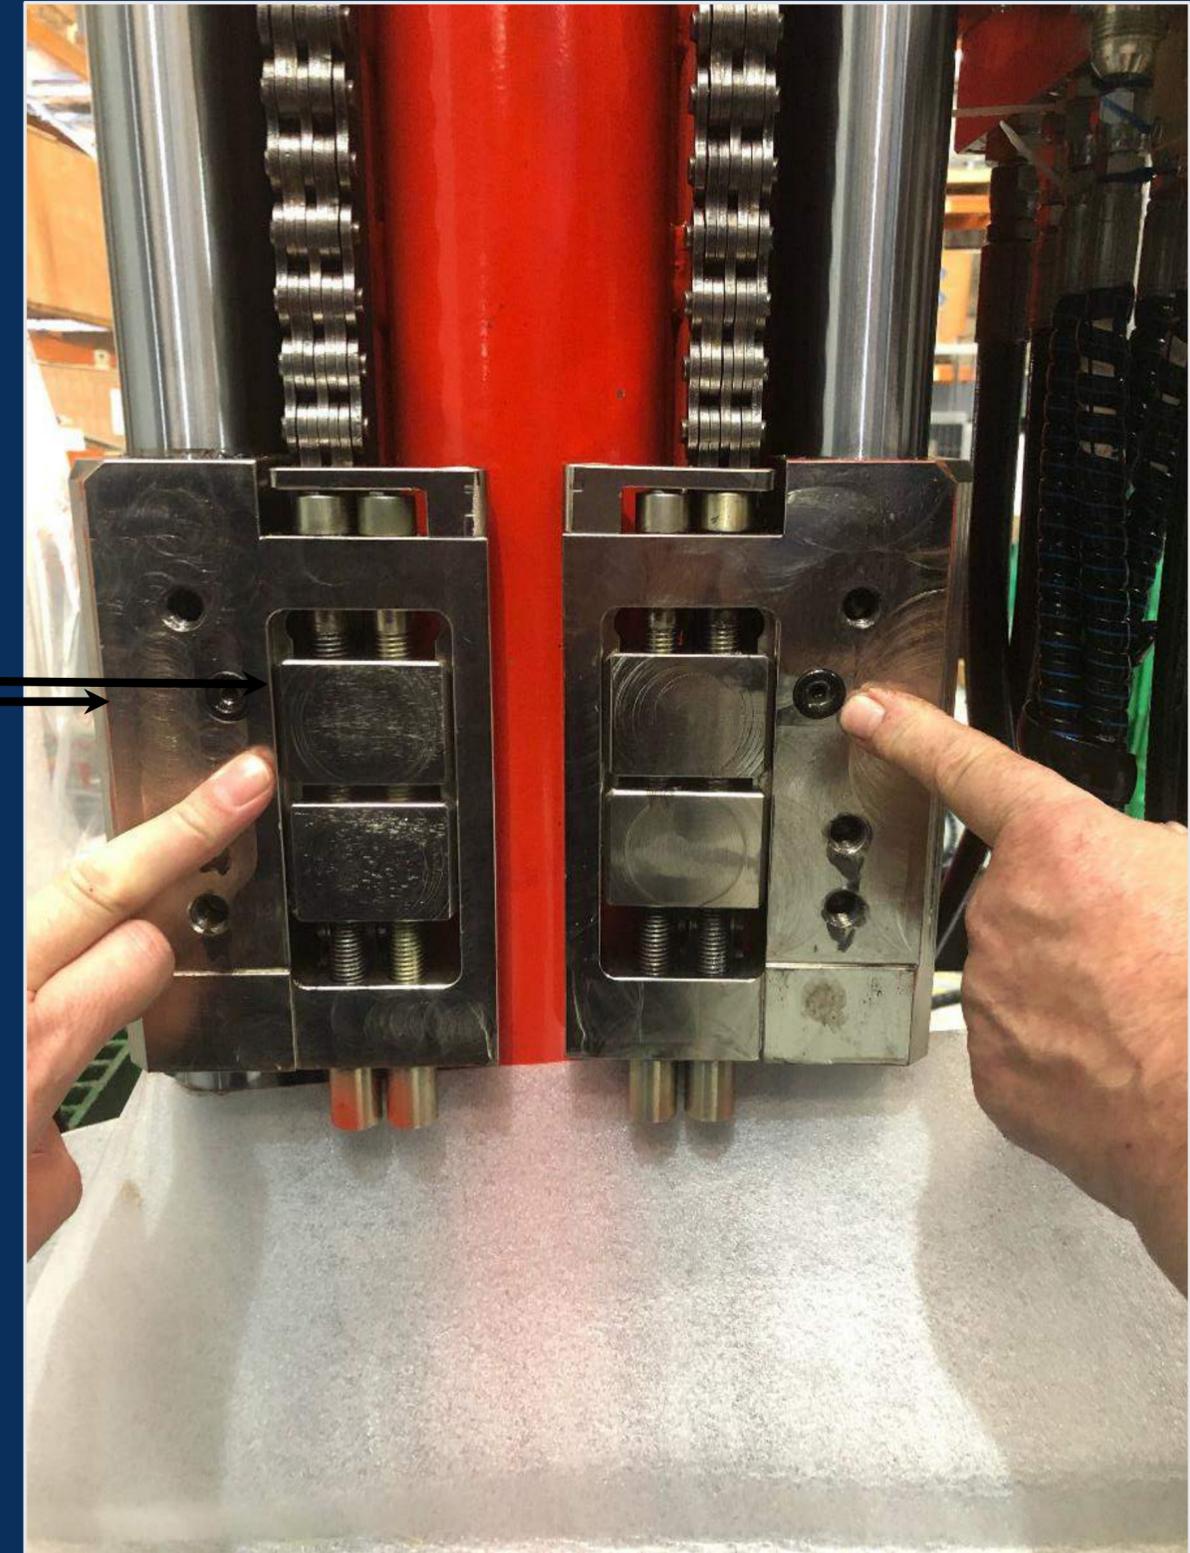

16. Check O rings installed, re install motor mount plate
17. Remount TSRU

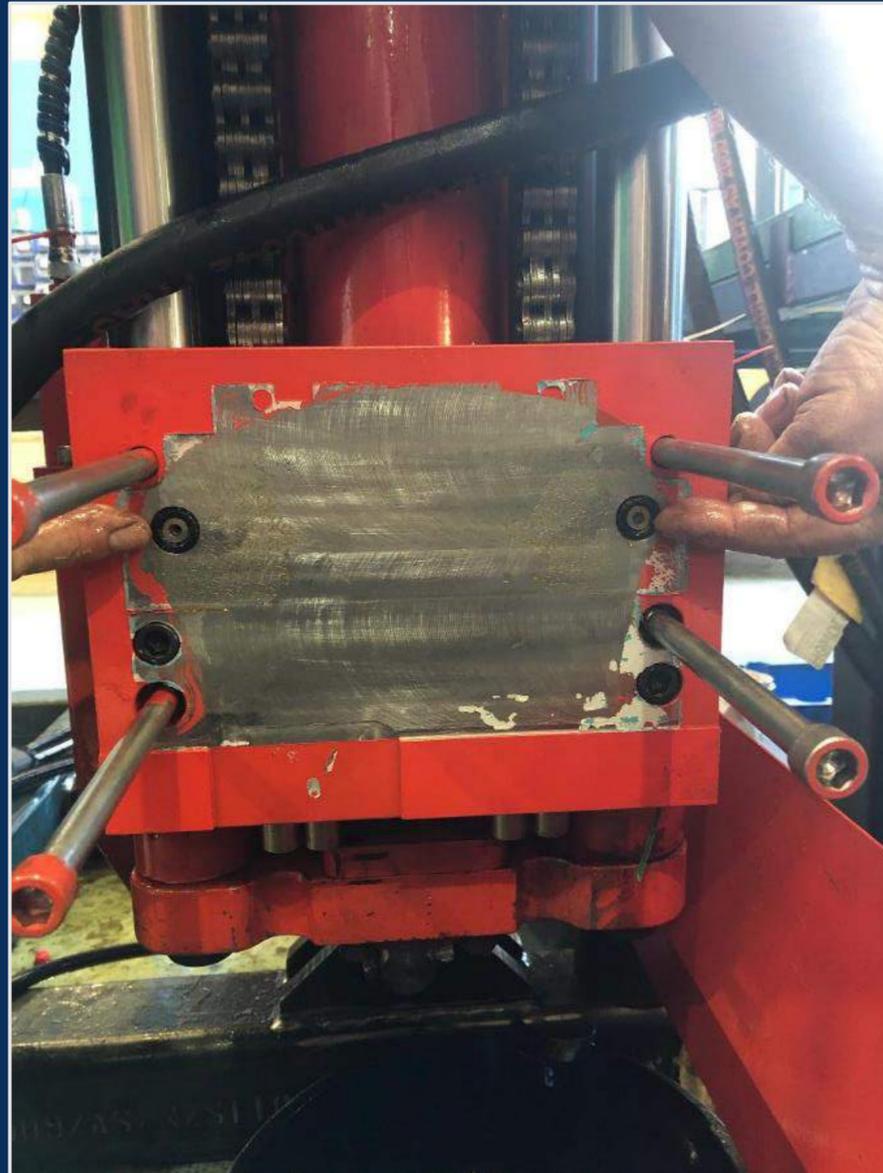

Installation Instructions



www.pempek.com.au | sales@pempek.com.au 3/13 Hoyle Ave Castle Hill NSW 2154 | +61 02 8853 4800

Pempek Systems Pty Ltd reserves the right to make corrections, enhancements, improvements and other changes to its products and services as needed. All products are sold subject to Pempek's terms and conditions of sale supplied at the time of order acknowledgment. Pempek warrants the performance of its products to the specifications applicable at the time of sale, in accordance with the warranty specified by the terms and conditions of sale.

<https://www.pempek.com.au/terms-and-conditions/>