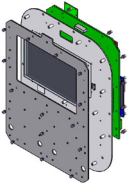
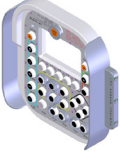
 
 
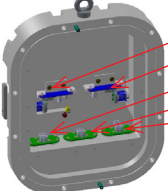
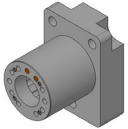
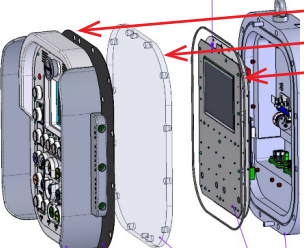


	Part Number	Description
	H0WD1701	Mid Section Assy - PCB Boards
	H0WD1802	Top Assembly With Buttons
	H0WD2301	Handle RH Assembly
	H0WD2401	Handle LH Assembly
	1 B0WD4002 2 B0WD9003 3 B0WDM001 4 B0WDN001 5 B0WDR001 H0WD7001	Individual PCB assemblies LOWD PCA With Bottom Enclosure Subassembly
	H0WD3901 H0WD3901 H0WD3501 H0WD3601 H0WD3701 H0WD4201	A125 Flameproof socket 150Deg A125 Flameproof socket 150Deg A119 Flameproof socket 30 Deg A121 Flameproof socket 60 Deg A122 Flameproof socket 90 Deg B122 Flameproof socket 270 Deg CMS14051 O-ring 33 x 1.5
	M0WDAN00 M0WD1400 M0WD3500	Gasket PC seal Lens O-ring